 


ScentProjector™ Deluxe User Guide

Basic Operation:

1. Plug in power
2. Turn speed control dial to desired fan speed.

**When plugged in, it will run for the initial times set by the red/blue dip switches in the back (see "Timings" for more details). Usually a unit is sent in the default of 30 sec on/30 sec off.*



Timings:

The following is the timing table (in sec.) for the dip switches. This is for both the red (on) and blue (off).

Other than continuous, every additional "flip up" on the switches "doubles the time", with continuous being "all up" except the 1st first switch – see below.




Changing the Mode:

Mode changing is not possible with the Deluxe version as it come with only Duty Cycle mode (mode #1). If you change the timing while running it is not updated until the next pass around or if you unplug and the plug in the unit again.

Mode #1

Duty Cycle

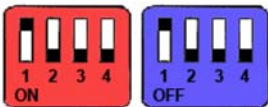

The following above represents the Duty Cycle (mode #1) shown as "on" for 30 sec. "off" for 30 sec. The Duty Cycle will loop until power is off and return back to the cycle if power is restored. The Duty Cycles mode is best for non interactive playback where a savings off power and scent usage is desired.